


FUSE DETAILS

Passenger Compartment Fuse Box

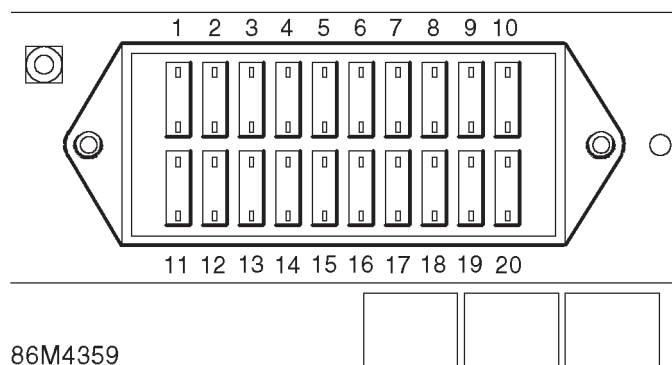

Fuse	Rating	Wire Colour	Function
1	15 Amp	N	Alarm ECU, hazard warning switch.
2	20 Amp	N	Trailer pick-up, column switch, interior lamp unit, clock, radio/cassette player.
3	15 Amp	W	Coolant temperature gauge, fuel gauge, rear screen wash/wipe switch, hazard warning switch, rear wiper park switch, fuel gauge relay.
4	15 Amp	W	Windscreen wiper motor, windscreen wiper delay unit, windscreen wash/wipe switch.
5	15 Amp	WO	Blower motor.
6	7.5 Amp	OU	Fog guard lamp ECU.
7	5 Amp	WO	Radio/cassette player, air conditioning.
8	15 Amp	RO	Heated rear screen warning lamp, heated rear screen element.
9	10 Amp	W	Cigar lighter.

FUSE DETAILS

10	20 Amp	PB	Alarm sounder relay.
11	7.5 Amp	UR	RH headlamp.
12	7.5 Amp	UR	LH headlamp.
13	7.5 Amp	UW	RH headlamp.
14	7.5 Amp	UW	LH headlamp.
15	5 Amp	R	Trailer pick-up, LH front side lamp.
16	5 Amp	R	Trailer pick-up, RH front side lamp, instrument pack, dim dip relay, cigar lighter, in-line resistor, coolant temperature gauge, speedometer, fuel gauge.
17	15 Amp	W	Brake pedal switch, reverse lamp switch, EGR ECU, EGR modulator.
18	20 Amp	N	Air conditioning.
19	5 Amp	N	Air conditioning.
20	5 Amp	W	Alarm ECU, engine immobilisation warning lamp, BBUS.
21	15 Amp	N	Alarm ECU.
22	7.5 Amp	BN	Diagnostic socket.